


ROMANOFF

INTERNATIONAL SUPPLY CORPORATION

9 DeForest Street • Amityville • New York, USA 11701 631-842-2400 • Fax 631-842-0028

email: sales@romanoff.com • www.romanoff.com

ROMANOFF ADJUSTABLE THERMOSTATS

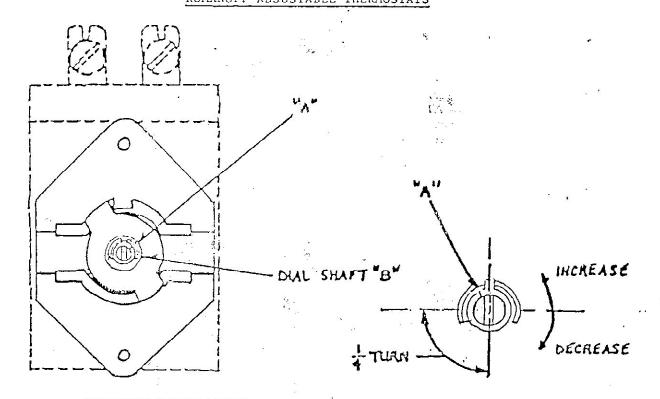

CHECKING CALIBRATION

EACH THERMOSTAT IS ADJUSTED AT THE FACTORY AND CALIBRATED ON PRECISION INSTRUMENTS TO CONTROL TEMPERATURES ACCURATELY. ADJUSTMENT OR RECALIBRATION IS NOT NEEDED UNLESS THE THERMOSTAT HAS BEEN MISHANDLED IN TRANSIT, OR CHANGED OR ABUSED WHILE IN SERVICE.

TO CHECK CALIBRATION

USE AN ACCURATE THERMOMETER TO CHECK TEMPERATURE.

TO CALIBRATE

 REMOVE KNOB FROM DIAL SHAFT "B" BY PULLING STRAIGHT OUT

- 2. WITH SCREWDRIVER, TURN SCREW "A"
 CLOCKWISE TO DECREASE AND
 COUNTERCLOCKWISE TO INCREASE
 TEMPERATURE. DO NOT ALLOW DIAL SHAFT
 "B" TO TURN DURING THIS OPERATION.
- 3. TURNING SCREW "A" 1/4 TURN IS A CHANGE OF APPROXIMATELY 35° F.
- 4. REPLACE KNOB OR CONTROL DIAL. AFTER A CALIBRATION IS MADE LET THE UNIT OPERATE UNTIL THE TEMPERATURE HAS STABILIZED, THEN RECHECK TO DETERMINE WHETHER OR NOT THE CALLIBRATION HAS BEEN CORRECTED.

COPYRIGHT: 1992 ROMANOFF INTERNATIONAL SUPPLY COMPANY, INC. ALL RIGHTS RESERVED. NO PART OF THIS WORK MAY BE REPRODUCED R COPIED IN ALTY FORM OR BY ANY LIEANS, INCLUDING BUT NOT RESTRICTED TO GRAPHIC, ELECTRONIC AND LIECHANICAL FOR EXALURE, PHOTOCOPYON, RECORDING, TURBOR OF BOTH AND HERMEYEL SYSTEMS, WITHOUT THE EXPRESS WRITTEN PERMISSIONOF ROMANOFF INTERNATIONAL SUPPLY CORP.



