

PRODUCT MANUAL SKU: 82-270-USA / 82-270A-USA

Medium Magnetic Tumblers Product Manual




Thank You For Your Purchase!

Congratulations on the purchase of your new Romanoff Medium Magnetic Tumbler. Please keep in mind that, due to the internal circuitry protection of the unit, rotation will begin 45 seconds after green button is pressed. As a suggestion as to the use of the unit, please use the following as a general guide:

- 1. Fill bowl with approximately 2 inches of water.
- 2. Fill the bowl with approximately one cup (8 ounces) of soap (BCR recommended)
- 3. Place $\frac{1}{2}$ pound of stainless steel shots (one of the containers provided).
- 4. Place pieces to be tumbled inside bowl and run for 45 minutes at a speed of approximately 6.5.

The timer on the unit controls total tumbling time. The unit will automatically reverse rotation approximately every 7 minutes. If desired finish is not accomplished after the first run, some experimentation should be done with regards to motor speed, amount of water, shot and soap used. However, the amounts given above have been proven to be generally successful. Good Luck!

SAFETY INSTRUCTIONS

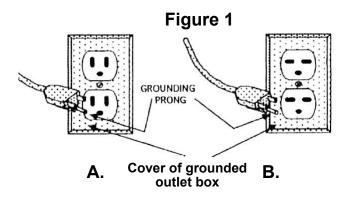

2. TOOL SAFETY INSTRUCTIONS

- Keep Work Area Clean Cluttered areas and benches invite accidents.
- 2. Avoid Dangerous Equipment

Don't expose power tools to rain. Don't use power tools in damp or wet locations. Keep work area well lit.

3. Keep Children Away

All visitors should be kept safe distance from work area and appliance.

4. Store Idle Tools

When not in use, tools should be stored in dry, high, and locked location out of the reach of children.

5. Don't Force Tool

It will do the job better and be safe at the rate for which it was designed.

6. Use Right Tool

Don't force small tool or attachment to do the job of a heavy-duty tool.

7. Wear Proper Apparel

Do not wear loose clothing or jewelry which may get caught in moving parts. Tie back long hair or use a proper hair net.

1. GROUND INSTRUCTIONS

This tool should be grounded while in use to protect the operator from electric shock. The tool is equipped with an approved three-conductor cord and three-prong grounding type plug to fit the proper grounding type receptacle. The green (or green and yellow) conductor in the cord is the grounding wire.

Never connect the green (or green and yellow) wire to a live terminal. If your unit is for use on less than 150 volts, it has a plug that looks like that shown in sketch (A) in Figure 1. If it is for use on 150 to 250 volts, it has a plug that looks like that shown in sketch (B). Use of an extension cords or a 2 prong adapter is not recommended.

8. Use Safety Glasses

Use safety glasses with all rotating tools. Also use a face or dust mask if cutting operation is dusty.

9. Don't Abuse Cord

Never carry tool by cord or yank it to disconnect from receptacle. Keep cord from heat, oil, and sharp edges.

10. Secure Work

Use clamps or a vise to hold work. It's safer than using your hand and it frees both hands to operate tool.

11. Don't Overreach

Keep proper footing and balance at all times.

12. Maintain Tools with Care

Keep tools sharp and clean for best and safest performance. Follow instructions for lubricating and changing accessories.

13. Disconnect Tools

When not in use; before servicing; when changing accessories such as blades, bits, cutters, etc.

14. Avoid Accidental Starting

Be sure switch is OFF when plugging in.

WARRANTY POLICY

Romanoff warrants all products furnished by it are free from defects in material and workmanship at the time of shipment for a period of eighteen (18) months from the date of shipment, or one (1) year from the date of installation, whichever occurs first. Claims must be made during that period and are limited to the replacement of parts claimed to be defective.

This warranty shall not extend to products that have been misused, neglected, altered or repaired without factory authorization during the warranty period. Operating conditions beyond our control such as improper voltage, excessive ambient temperatures, or other conditions that would affect the performance or life of the product will also cause the warranty to become void.

Permission to return parts for warranty repair must be obtained, and all returns must be prepaid factory. If, after examination, the product or part is found to be defective, it will be repaired or replaced on a no-charge basis and returned. On the other hand, if it is determined that the warranty has not been breached by Romanoff then the usual charges for repair or replacement will be made. Parts or products that are obsolete or those made to special order are not returnable.

This limited warranty applies only to the above and is for the period set forth. Romanoff maximum liability shall not, in any case, exceed the contract price for the product, part, or component claimed to be defective; and Romanoff assumes no liability at all for any special, indirect, or consequential damages arising from defective equipment.

THERE ARE NO WARRANTIES APPLIED OR EXPRESSED THAT EXTEND BEYOND THOSE CONTAINED IN THIS LIMITED WARRANTY.